

## **TRW Automotive**

Steering & Suspension Systems

## Service Bulletin #COL-148

## CF028 Air Brake Retro-Fit Works with Bendix P/N 5001225 and 5002409

## Kit #SK000253

Released May, 2000

- 1. Squeeze the upper shroud and allow it to slide down the column.
- 2. Remove the turn signal switch from the shroud cap, and disconnect wiring. Save these screws.
- 3. Remove the shroud cap by loosening and removing four screws. Save these screws. Disconnect the horn contact wire and remove with the shroud cap.
- 4. Slide the upper shroud up and off of the column. Dispose of the two shroud pieces.
- 5. Slide the new upper shroud over the column.
- 6. Connect the new bracket to your air brake valve using three screws. (Air Brake Bracket Screws).
- 7. Connect the air brake valve and bracket to the new shroud cap using two screws and nuts provided in this kit. (Air Brake Assy. Screws & Nuts).
- 8. Reconnect the turn signal switch to the upper shroud using the screws which were removed. (Turn Signal Screws).
- 9. Install the horn contact and route the wire.

TRW Commercial Steering Systems P.O. Box 60 Lafayette, IN 47902 Phone: 765.423.5377 Fax: 765.429.1868 This TRW Commercial Steering Division service bulletin has been written to help you repair commercial vehicles more efficiently. This bulletin should not replace your manuals; you should use them together. These materials are intended for use by properly trained, professional mechanics, NOT "Doit-yourselfers". You should not try to diagnose or repair steering problems unless you have been trained, and have the right equipment, tools and know-how to perform the work correctly and safely.

- 10. Route air lines and wiring through the holes in the upper shroud. Make the connections to the air brake valve, turn signal switch and horn contact.
- Connect the shroud cap assembly to the column using the four which were removed and saved. (Shroud Screws).
- 12. Raise the upper shroud into position, and snap it into place in the shroud cap.

